



MC9500-K QUICK START GUIDE

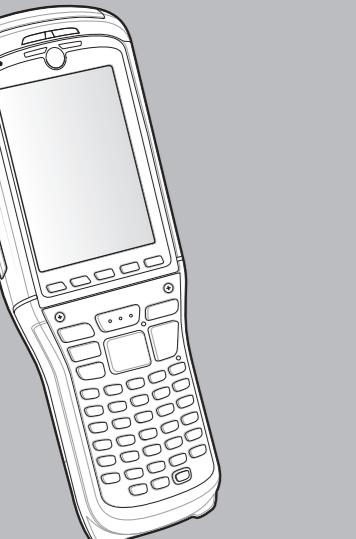

FEATURES

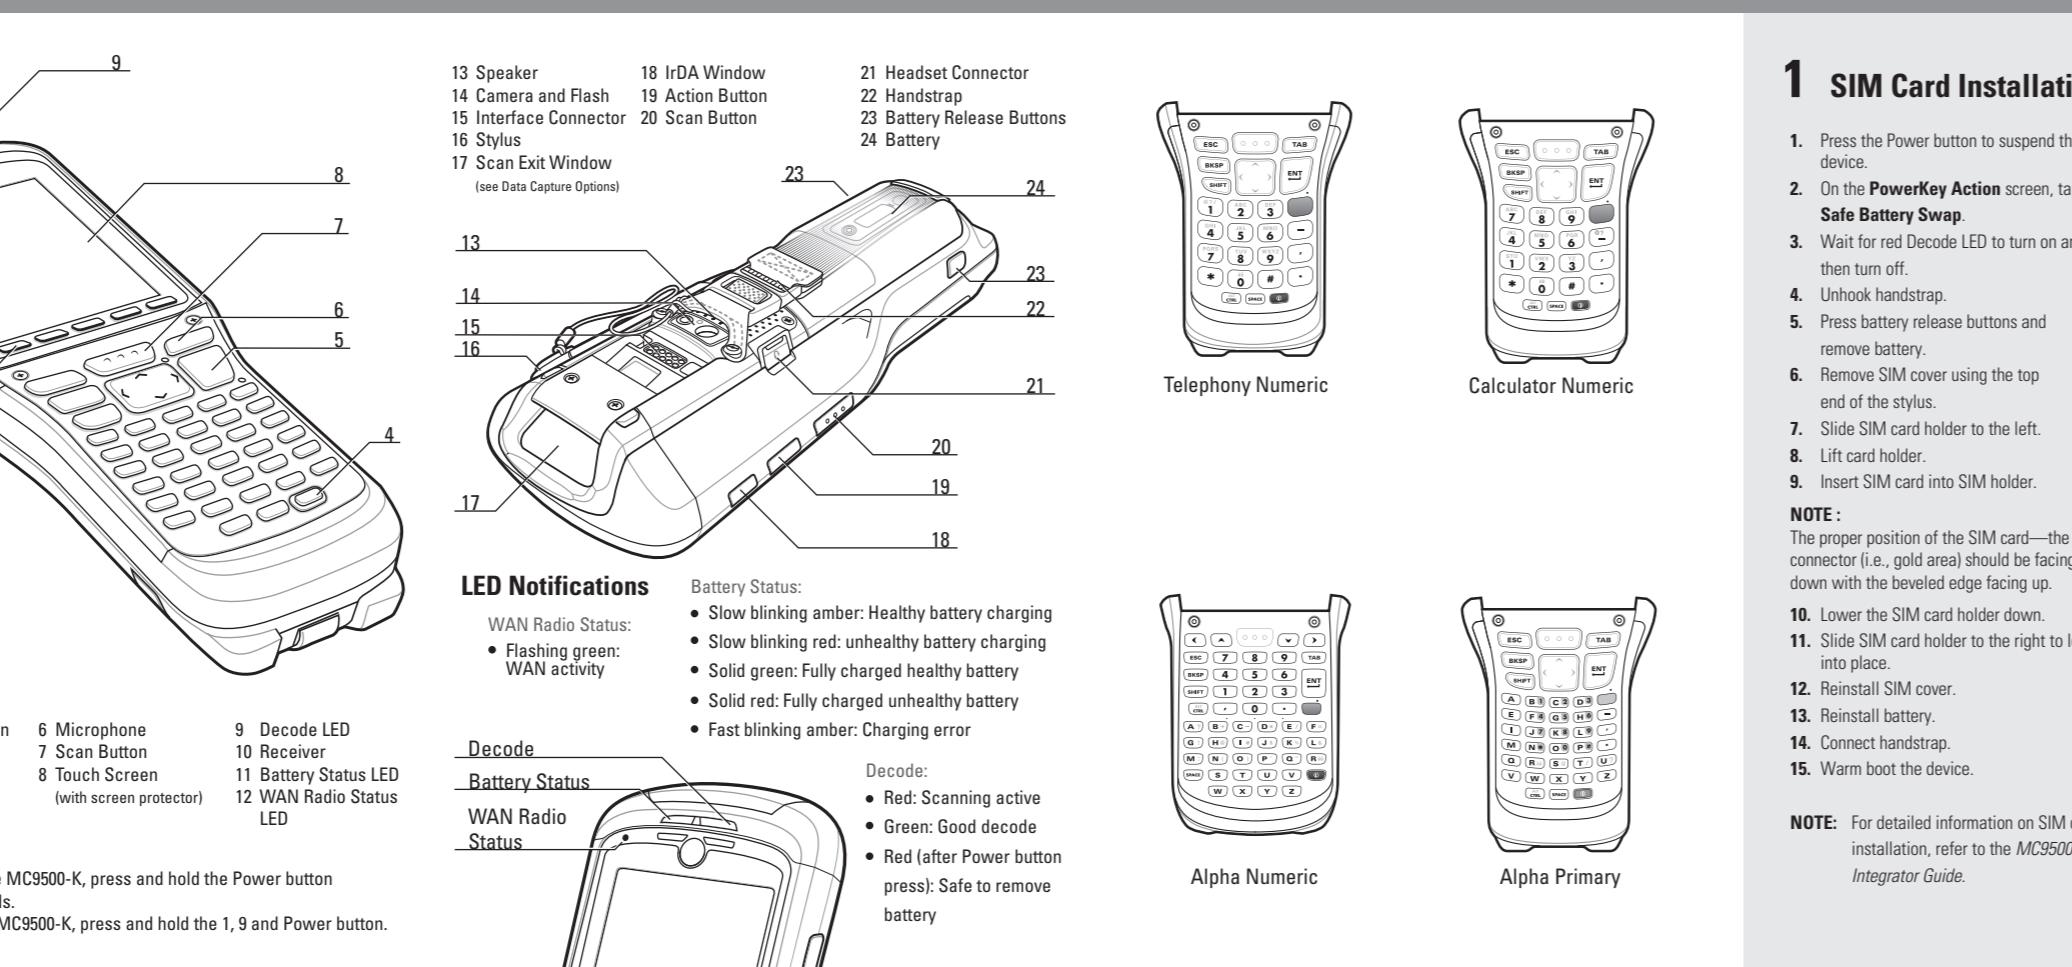

LED Notifications

WAN Radio Status:

- Flashing green: WAN activity
- Slow blinking red: unhealthy battery charging
- Solid green: Fully charged healthy battery
- Solid red: Fully charged unhealthy battery
- Fast blinking amber: Charging error

Decode:

- Red: Scanning active
- Green: Good decode
- Red (after Power button press): Safe to remove battery

Battery Status:

WAN Radio Status:

1 Up/Down Volume Button

2 Scan Button

3 Function Keys

4 Power Button

5 Keypad

6 Microphone

7 Scan Button

8 Touch Screen

(with screen protector)

9 Decode LED

10 Receiver

11 Battery Status LED

12 WAN Radio Status LED

13 Speaker

14 Camera and Flash

15 Interface Connector

16 Stylus

17 Scan Exit Window

(see Data Capture Options)

18 IrDA Window

19 Action Button

20 Scan Button

21 Headset Connector


22 Handstrap

23 Battery Release Buttons

24 Battery

Note 1: To warm boot the MC9500-K, press and hold the Power button for five(5) seconds.
To cold boot the MC9500-K, press and hold the 1, 9 and Power button.

KEYPADS

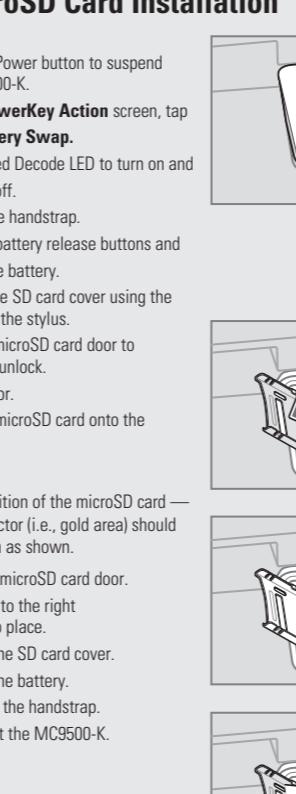

GETTING STARTED

1 SIM Card Installation (GSM Only)

1. Press the Power button to suspend the device.
2. On the **PowerKey Action** screen, tap **Safe Battery Swap**.
3. Wait for red Decode LED to turn on and then turn off.
4. Unhook the handstrap.
5. Press battery release buttons and remove battery.
6. Remove SIM cover using the top end of the stylus.
7. Slide SIM card holder to the left.
8. Lift card holder.
9. Insert SIM card into SIM holder.
10. Place the microSD card onto the contacts.

NOTE:

The proper position of the SIM card—the card connector (i.e., gold area) should be facing down with the beveled edge facing up.

10. Lower the SIM card holder down.
11. Slide SIM card holder to the right to lock into place.
12. Reinstall SIM cover.
13. Reinstall battery.
14. Connect handstrap.
15. Warm boot the device.

NOTE:

For detailed information on SIM card installation, refer to the MC9500 Integrator Guide.

2 microSD Card Installation

1. Press the Power button to suspend the device.
2. On the **PowerKey Action** screen, tap **Safe Battery Swap**.
3. Wait for red Decode LED to turn on and then turn off.
4. Unhook the handstrap.
5. Press battery release buttons and remove battery.
6. Remove the SD card cover using the top end of the stylus.
7. Slide the microSD card door to the left to unlock.
8. Lift card holder.
9. Insert microSD card into SD card holder.
10. Place the microSD card onto the contacts.

NOTE:

The proper position of the microSD card—the card connector (i.e., gold area) should be facing down as shown.

10. Lower the microSD card door.
11. Slide door to the right to lock into place.
12. Reinstall SD card cover.
13. Reinstall the battery.
14. Reconnect the handstrap.
15. Warm boot the MC9500-K.

3 Insert the Battery

1. Single Bay Cradle
2. Four Bay Cradle

Battery Status LED (in charge)

Slow Blinking Amber = Healthy battery charging
Slow Blinking Red = Unhealthy battery charging
Solid Green = Healthy battery fully charged
Solid Red = Unhealthy battery fully charged
Fast Blinking Amber = Charging error

NOTE:

The proper position of the microSD card—the card connector (i.e., gold area) should be facing down with the beveled edge facing up.

10. Lower the SIM card holder down.
11. Slide SIM card holder to the right to lock into place.
12. Reinstall SIM cover.
13. Reinstall battery.
14. Connect handstrap.
15. Warm boot the device.

4 Charge the MC9500-K

1. Single Slot Spare Battery Charger
2. Four Slot Battery Charger

Battery Status LED

Slow Blinking Amber = Healthy battery charging
Slow Blinking Red = Unhealthy battery charging
Solid Green = Healthy battery fully charged
Solid Red = Unhealthy battery fully charged
Fast Blinking Amber = Charging error

NOTE:

The proper position of the SIM card—the card connector (i.e., gold area) should be facing down with the beveled edge facing up.

10. Lower the SIM card holder down.
11. Slide SIM card holder to the right to lock into place.
12. Reinstall SIM cover.
13. Reinstall battery.
14. Connect handstrap.
15. Warm boot the device.

5 Charge the Battery

1. Single Bay Cradle
2. Four Bay Cradle

Battery Status Indicator

Charge Level Indicator
Battery Status Button

NOTE:

The proper position of the microSD card—the card connector (i.e., gold area) should be facing down as shown.

10. Lower the SIM card holder down.
11. Slide SIM card holder to the right to lock into place.
12. Reinstall SIM cover.
13. Reinstall battery.
14. Connect handstrap.
15. Warm boot the device.

Standalone Mode

Press the Battery Status button.

Battery Status LED

Solid Green = Healthy battery
Solid Red = Unhealthy battery

Battery Indicators

Charge Level Indicator displays approximate battery level.

NOTE:

For detailed information on SIM card installation, refer to the MC9500 Integrator Guide.

MC9500-K Battery Status LED

Slow Blinking Amber = Healthy battery charging
Slow Blinking Red = Unhealthy battery charging
Solid Green = Healthy battery fully charged
Solid Red = Unhealthy battery fully charged
Fast Blinking Amber = Charging error

NOTE:

Press the Battery Status button.

Charge Level Indicator

Charge Level Indicator displays approximate battery level.

Battery Indicators

Charge Level Indicator displays approximate battery level.

NOTE:

For detailed information on SIM card installation, refer to the MC9500 Integrator Guide.

Fully Charged

Indicates battery is fully charged.

Partially Charged


Indicates battery is partially charged.

Uncharged

Indicates battery is uncharged.

BATTERY REMOVAL

1. Press Power button to suspend the MC9500-K.
2. Wait for the red Decode LED to turn on and then turn off.
3. Unhook handstrap.
4. Press the two battery release latches. The battery ejects slightly from the device.
5. Remove battery from device.

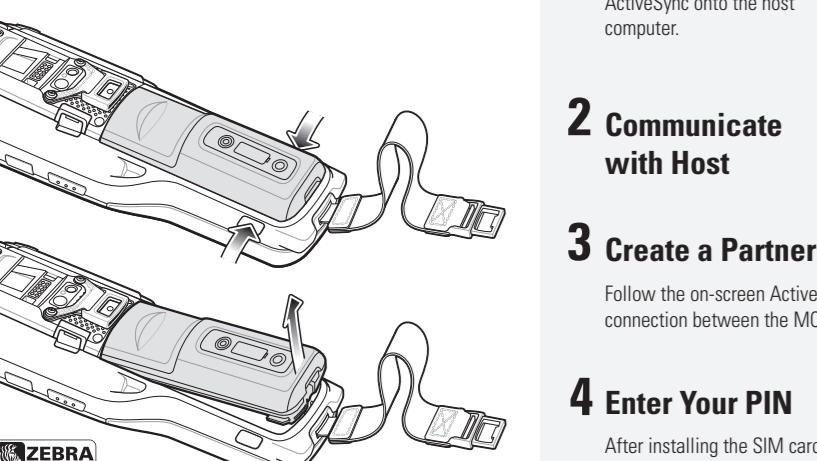

72-118504-06 Rev. A—February 2015

MC9500-K Quick Start Guide

COMMUNICATION

1 Install ActiveSync®

Download ActiveSync® 4.5 or higher from <http://www.microsoft.com> and follow the instructions to install ActiveSync onto the host computer.



2 Communicate with Host

3 Create a Partnership

Follow the on-screen ActiveSync instructions to establish a connection between the MC9500-K and the host computer.

4 Enter Your PIN

After installing the SIM card activate your mobile service connection. In most cases, SIM cards are preset with a PIN (Personal Identity Number), provided by your service provider.

1. Press the Power button to turn on the MC9500-K.
2. Tap **Start > Phone**.
3. Enter the PIN from your service provider.
4. Tap Enter.

For more information visit:
<http://www.zebra.com/mc9500>

ACCESSORIES


Screen Protector

Zebra recommends the use of a screen protector to minimize wear and tear. Screen protectors enhance the usability and durability of touch screen displays. Benefits include:

- Protection from scratches and gouges
- Durable writing and touch surface with tactile feel
- Abrasion and chemical resistance
- Glare reduction
- Keeping the device's screen looking like new
- Quick and easy installation.

Not using a screen protector can affect your warranty coverage. An initial screen protector is already applied to your MC9500-K. Contact your local account manager or Zebra for more information and purchasing details. Part number: KT-122010-01R Screen Protector 3/pk.


Vehicle Cradle

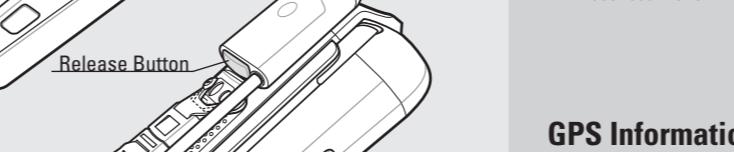

Auto-Charge Cable



Vehicle Battery Charger

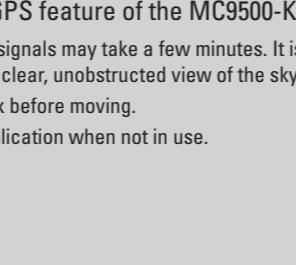


USB/Charging Cable



Magnetic Stripe Reader




Single Bay USB Cradle

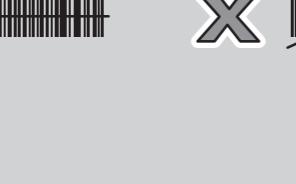

Four Bay Ethernet Cradle


Four Bay Charge Only Cradle
(shown with optional guide cups)

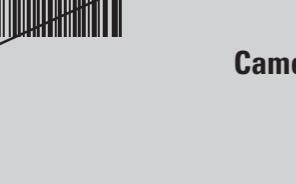

Four Slot Battery Charger



Single Slot Battery Charger

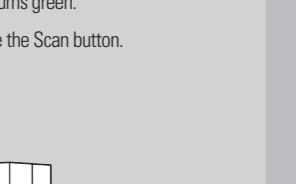

Release Button



Camera Photo

GPS Information

GPS

Information

When using the GPS feature of the MC9500-K:

- Acquiring satellite signals may take a few minutes. It is best to be outside and have a clear, unobstructed view of the sky.

- Obtain a satellite fix before moving.

- Shutdown GPS application when not in use.

Low Scanning

High Scanning

Medium Scanning

GPS

Information

When using the GPS feature of the MC9500-K:

- Acquiring satellite signals may take a few minutes. It is best to be outside and have a clear, unobstructed view of the sky.

- Obtain a satellite fix before moving.

- Shutdown GPS application when not in use.

GPS

Information

When using the GPS feature of the MC9500-K:

- Acquiring satellite signals may take a few minutes. It is best to be outside and have a clear, unobstructed view of the sky.

- Obtain a satellite fix before moving.

- Shutdown GPS application when not in use.

GPS

Information

When using the GPS feature of the MC9500-K:

- Acquiring satellite signals may take a few minutes. It is best to be outside and have a clear, unobstructed view of the sky.

- Obtain a satellite fix before moving.

- Shutdown GPS application when not in use.

GPS

Information

When using the GPS feature of the MC9500-K:

- Acquiring satellite signals may take a few minutes. It is best to be outside and have a clear, unobstructed view of the sky.

- Obtain a satellite fix before moving.

- Shutdown GPS application when not in use.

GPS

Information

When using the GPS feature of the MC9500-K:

- Acquiring satellite signals may take a few minutes. It is best to be outside and have a clear, unobstructed view of the sky.

- Obtain a satellite fix before moving.

- Shutdown GPS application when not in use.

GPS

Information

When using the GPS feature of the MC9500-K:

- Acquiring satellite signals may take a few minutes. It is best to be outside and have a clear, unobstructed view of the sky.

- Obtain a satellite fix before moving.

- Shutdown GPS application when not in use.

GPS

Information

When using the GPS feature of the MC9500-K:

- Acquiring satellite signals may take a few minutes. It is best to be outside and have a clear, unobstructed view of the sky.

- Obtain a satellite fix before moving.

- Shutdown GPS application when not in use.

GPS

Information

When using the GPS feature of the MC9500-K:

- Acquiring satellite signals may take a few minutes. It is best to be outside and have a clear, unobstructed view of the sky.

- Obtain a satellite fix before moving.

- Shutdown GPS application when not in use.

GPS

Information

When using the GPS feature of the MC9500-K:

- Acquiring satellite signals may take a few minutes. It is best to be outside and have a clear, unobstructed view of the sky.

- Obtain a satellite fix before moving.

- Shutdown GPS application when not in use.

GPS

Information

When using the GPS feature of the MC9500-K:

- Acquiring satellite signals may take a few minutes. It is best to be outside and have a clear, unobstructed view of the sky.

- Obtain a satellite fix before moving.

- Shutdown GPS application when not in use.

GPS

Information

When using the GPS feature of the MC9500-K:

- Acquiring satellite signals may take a few minutes. It is best to be outside and have a clear, unobstructed view of the sky.

- Obtain a satellite fix before moving.

- Shutdown GPS application when not in use.

GPS

Information

When using the GPS feature of the MC9500-K:

- Acquiring satellite signals may take a few minutes. It is best to be outside and have a clear, unobstructed view of the sky.

- Obtain a satellite fix before moving.

- Shutdown GPS application when not in use.

GPS

Information

When using the GPS feature of the MC9500-K:

- Acquiring satellite signals may take a few minutes. It is best to be outside and have a clear, unobstructed view of the sky.

- Obtain a satellite fix before moving.

- Shutdown GPS application when not in use.

GPS

Information

When using the GPS feature of the MC9500-K:

- Acquiring satellite signals may take a few minutes. It is best to be outside and have a clear, unobstructed view of the sky.

- Obtain a satellite fix before moving.

- Shutdown GPS application when not in use.

GPS

Information

When using the GPS feature of the MC9500-K:

- Acquiring satellite signals may take a few minutes. It is best to be outside and have a clear, unobstructed view of the sky.

- Obtain a satellite fix before moving.

- Shutdown GPS application when not in use.